## Node red - ouverture d'un coffre

#### 1 Le coffre

Le couvercle est bloqué par un électroaimant : Electroaimant Grove 101020073 <u>https://wiki.seeedstudio.com/Grove-</u> <u>Electromagnet/</u>



Un dessin des pièces d'une boite peut être obtenu rapidement sur certain sites. Exemple https://www.festi.info/boxes.py/

IntegratedHingeBox?language=fr

Procédure à suivre :

- Choisir les dimensions
- matériaux en médium de 3mm
- Sauvegarder en .DXF
- Utiliser LibreCad pour ajouter un perçage ou un logo
  - Couche blanche : découpe
  - Couche rouge : écriture
  - Découpe par laser



#### 2 Commande d'un électroaimant par la liaison série

```
Téléverser ce code dans la carte Arduino
```

```
//EA => electroAimant
#define EA 8
String recu;
void setup() {
 Serial.begin(9600);
 pinMode(EA, OUTPUT);
  //Pour que la boite soit fermée à la mise sous tension
  digitalWrite(EA,HIGH);
}
void loop() {
  //lecture port série
  if(Serial.available()>0)
  {
    recu = Serial.readStringUntil('\n');
    // Code bon, ouvrir la boite
    if(recu=="115") digitalWrite(EA,LOW);
    else
    // Mauvais code, fermer la boite
    if(recu!= "115") digitalWrite(EA,HIGH);
  }
```

Dans le moniteur série, écrire le bon code ou une code faux puis cliquer sur Envoyer.

	/dev/ttyACM0			0
115				Envoye
🗹 Défilement a	automatique 🗌 Afficher l'horodatage	Nouvelle ligne	▼ 9600 baud	▼ Effacer la sort

### 3 Utilisation de node red

Dans manage palette, vérifier que la librairie dashboard est installée.

<ul> <li>node-red-dashboard</li> <li>3.3.1</li> </ul>		
> 21 nodes	update to 3.4.	0 in use
lecopier ce sketch.		
abc text input	/dev/ttyACM0	
	Connected	

Après Deploy, si le point n'est pas vert et la liaison série non connectée, vérifier que la configuration (nom du port et vitesse) est la même que dans l'IDE Arduino

Dans la config du port série, rajouter ceci

Output

Add character to output messages	\n
----------------------------------	----

A droite, dans le menu \_\_\_\_\_ puis dashboard, ajouter une page « coffre » et dedans un groupe « Code ».



Deployer Régultat à obt



# 4 Configurations

Dans le texte input, delay à 0 attend la touche entrée au lieu d'envoyer toutes les x ms.

Dans le serial, ajouter un \n à la fin des messages permet d'utiliser cette ligne du code Arduino « recu = Serial.readStringUntil('\n'); »

Properties		Cancel
		•
I Group	[Coffre] Code	~
迅 Size	auto	
[Label		
Tooltip	optional tooltip	
Mode	text input v O Dela	ay (ms) 0
If msg arrive	s on input, pass through to outpu	ut: 🔽
Send value on	focus leave: 🗸	
☑ When chang	led, send:	
Payload	Current value	
Торіс		
Class	Optional CSS class name(s) f	or widget
Name		
Setting Delay	to 0 waits for Enter or Tab key, to	o send input.
ootting bolu		
it easiel out nos	a > Edit coviel next node	
it serial out noc	e > Edit serial-port node	Canad
it serial out noc	e > Edit serial-port node	Cancel Upda
it serial out noc Delete	e > Edit serial-port node	Cancel Upda
tit serial out noc Delete Properties	le > Edit serial-port node	Cancel Upda
t serial out noc Delete <b>Properties</b> ¢ Serial Port ¢ Settings	le > Edit serial-port node	Cancel Upda
t serial out noc Delete <b>Properties</b> ¢ Serial Port ¢ Settings	le > Edit serial-port node /dev/ttyACM0 Baud Rate Data Bits v 9600 8 v	Cancel Upda
t serial out noc Delete Properties C Serial Port & Settings	le > Edit serial-port node /dev/ttyACM0 Baud Rate Data Bits v 9600 8 v DTR RTS CT	Cancel Upda
t serial out noc Delete <b>Properties</b> ¢ Serial Port ¢ Settings	le > Edit serial-port node /dev/ttyACM0 Baud Rate Data Bits v 9600 8 v DTR RTS CT auto v auto v auto	Cancel Upda
t serial out noc Delete Properties C Serial Port S Settings D Input	le > Edit serial-port node /dev/ttyACM0 Baud Rate Data Bits v 9600 8 v DTR RTS CT auto v auto v auto	Cancel Upda
t serial out noc Delete Properties Serial Port Settings	le > Edit serial-port node /dev/ttyACM0 Baud Rate Data Bits v 9600 8 v DTR RTS CT auto v auto v auto	Cancel Upda
t serial out noc Delete  Properties  Serial Port  Settings  I Optionally was Split input	le > Edit serial-port node	Cancel Upda
it serial out noc Delete  Properties  C Serial Port  Settings  D Input Optionally was Split input and deliver	le > Edit serial-port node /dev/ttyACM0 Baud Rate Data Bits v 9600 8 v DTR RTS CT auto v auto v auto ait for a start character of on the character v ASCII strings v	Cancel Upda
it serial out noc Delete Properties C Serial Port C Settings D Input Optionally was Split input and deliver Output	le > Edit serial-port node /dev/ttyACM0 Baud Rate Data Bits v 9600 8 v DTR RTS CT auto v auto v auto ait for a start character of on the character v ASCII strings v	Cancel Upda
serial out noc Delete     Properties     Serial Port     Settings     Input     Optionally was     Split input     and deliver     Output     Add characte	le > Edit serial-port node /dev/ttyACM0 Baud Rate Data Bits v 9600 8 v DTR RTS CT auto v auto v ar auto v auto v ar auto v ASCII strings v er to output messages \n	Cancel Upda
it serial out noc Delete  Properties  C Serial Port  Settings  I D Input Optionally wa Split input and deliver  Output Add characte  Request	le > Edit serial-port node /dev/ttyACM0 Baud Rate Data Bits • 9600 8 • DTR RTS CT auto • auto • auto ait for a start character of on the character • ASCII strings • er to output messages \n	Cancel Upda
it serial out noc Delete  Properties  C Serial Port  Settings  I D Input Optionally wa Split input and deliver  Output Add characte  Request Default resord	le > Edit serial-port node /dev/ttyACM0 Baud Rate Data Bits v 9600 8 v DTR RTS CT auto v auto v auto ait for a start character of on the character v ASCII strings v er to output messages \n	Cancel Upda